



User  
manual

Dishwasher



52C850

## Content

Safety information .....	3
Control panel and functions .....	5
Programme table .....	6
Before the first use .....	7
Filling with rinse aid .....	7
Adjusting the dosage of rinse aid .....	8
Loading cutlery and dishes .....	8
Filling with detergent .....	11
Unloading the dishwasher .....	11
Cleaning and care .....	12
Environmental concerns .....	13
Something not working .....	14
Technical data .....	16
Consumption values .....	16
Hints for test institutes .....	17
Installation .....	18
Warranty .....	21

### The Thoughtful Design Innovator.

Do you remember the last time you opened a gift that made you say "Oh! How did you know? That's exactly what I wanted!" That's the kind of feeling that the designers working for all brands in the Electrolux family seek to evoke in everyone who chooses or uses one of our products. We devote time, knowledge, and a great deal of thought to anticipating and creating the kind of appliances that our customers really need and want. This kind of thoughtful care means innovating with insight. Not design for design's sake, but design for the user's sake. For us, thoughtful design means making appliances easier to use and tasks more enjoyable to perform, freeing our customers to experience that ultimate 21st century luxury, ease of mind. Our aim is to make this ease of mind more available to more people in more parts of their everyday lives, all over the world. So when we say we're thinking of you, you know we mean just that.

### Electrolux. Thinking of you.

Dishlex. We are part of the Electrolux family. Share more of our thinking at [www.electrolux.com](http://www.electrolux.com)



## Safety information

In the interest of your safety and to ensure correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on its use and safety.

### Correct use

- This dishwasher is only intended for washing household utensils suitable for machine washing.
- Do not put any solvents in the dishwasher. This could cause an explosion.
- Knives and other items with sharp points must be loaded in the cutlery basket with their points down or placed in a horizontal position in the upper basket.
- Only use products (detergent, cleaners, rinse aid etc) suitable for dishwashers.
- Avoid opening the door while the appliance is in operation, hot steam may escape.
- Do not take any dishes out of the dishwasher before the end of the dishwashing cycle.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- This product should be serviced only by an authorised service engineer, and only genuine spare parts should be used.

### General safety

- Dishwasher detergents are very alkaline and extremely dangerous if swallowed. Be careful to keep them away from your eyes and skin, keep children away from the dishwasher when the door is opened and only put detergent in the dispenser when you are ready to wash.

Otherwise, check that the detergent receptacle in the dispenser is empty.

- The water in your dishwasher is not for drinking. Detergent residues may still be present in your machine.
- Ensure that the door of the dishwasher is always closed when it is not being loaded or unloaded. In this way you will avoid anybody tripping over the open door and hurting themselves.
- Do not sit or stand on the open door.

### Child safety

- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
- Young children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging well away from children. There is risk of suffocation.
- Keep all detergents in a safe place out of children's reach.
- Keep children well away from the dishwasher when the door is open.

## Installation


- Check your dishwasher for any transport damage. Never connect a damaged machine. If your dishwasher is damaged contact your supplier.
- All packaging must be removed before use.
- Any electrical and plumbing work required to install this appliance must be carried out by a qualified and competent person.
- For safety reasons it is dangerous to alter the specifications or attempt to modify this product in any way.
- Never use the dishwasher if the electrical supply cable and water hoses are damaged; or if the control panel, work top or plinth area are damaged such that the inside of the appliance is freely accessible. Contact your local Customer Care centre, in order to avoid hazard.
- All sides of the dishwasher must never be drilled to prevent damage to hydraulic and electric components.

### **WARNING!**

For electrical and water connection carefully follow the instructions given in specific paragraphs.



## Control panel and functions

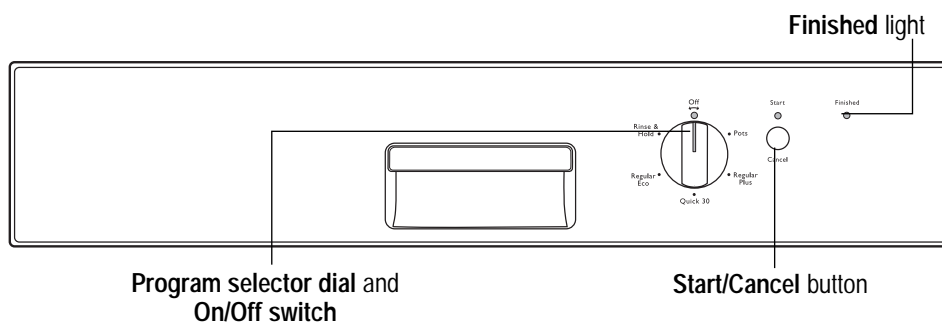

### Program selector dial and On/Off switch

- when in this position, the machine is switched off (corresponding light off),
- when the marker on the dial corresponds with a program, the machine is switched on and a program is selected (corresponding light on)

### Start/Cancel button

- **Starting the washing program:**
  1. Select a washing program.
  2. Press the Start/Cancel button (corresponding light on).

#### **IMPORTANT!**

Once the program has started, if you want to change the selection made you must cancel the washing program in progress.

- **Cancel the washing program in progress:**
  1. Press and hold the Start/Cancel button until the corresponding light turns off.
  2. Release the Start/Cancel button.
  3. Turn the program selector dial to the Off position or select a new washing program (check that there is detergent in the detergent dispenser).

### Finished light

Illuminates when the washing program has ended. Switch off the dishwasher by returning the programme selector dial to the Off position. The On/Off indicator light turns off.

It also has added functions of visual signalling as:

- intervention of an alarm due to the malfunction of the machine.

## Program table

Program	Use	Cycle description
<b>Pots</b>	Heavy soil. Crockery, cutlery, pots and pans	Prewash - Main wash 2 intermediate rinses - Final rinse - Dry
<b>Regular Plus</b>	Normal soil. Crockery and cutlery Use this program for maximum performance	Prewash - Main wash 2 intermediate rinses - Final rinse - Dry
<b>Quick 30</b>	Light soil. Crockery and cutlery Or half load of Normal soil	Main wash- Final rinse
<b>Regular Eco</b>	Normal soil. Crockery and cutlery This program is recommended to wash a full load and minimize energy and water usage.	Prewash - Main wash Final rinse - Dry
<b>Rinse &amp; Hold</b>	Any. Partial load (to be completed later in the day). This program does not require the use of detergent.	Prewash



## Before the first use

### When using separately rinse aid and detergent:

- fill up the rinse aid dispenser with rinse aid
- fill up the detergent dispenser with detergent

### When using tablets that integrate rinse aid and detergent:

- there is no need to fill up with rinse aid:  
place the tablets in the detergent dispenser.



When using detergent, rinse aid or tablets, follow the manufacturers instructions.

### **IMPORTANT!**


If the drying results are not satisfactory we recommend that you:

1. Fill up the rinse aid dispenser with rinse aid.
2. Set the rinse aid dosage to position 2.


## Filling with rinse aid

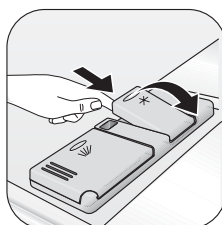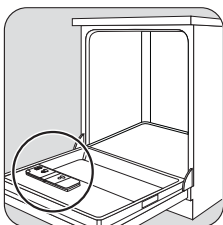


Open the lid.

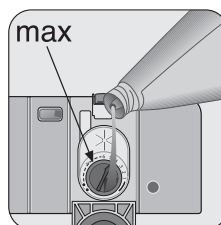

Fill up with rinse aid. The maximum level for filling is indicated by "max".

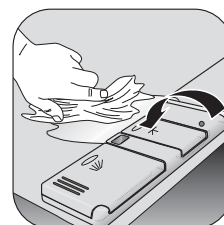

Clean up any rinse aid which overflows. Close the lid and press until it locks.

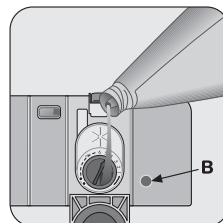

Top up the rinse aid when the indicator (B) becomes clear.



### **CAUTION!**

Never fill the rinse aid dispenser with any other substances (e.g. dishwasher cleaning agent, liquid detergent). This may damage the appliance.


## Adjusting the dosage of rinse aid

Increase the dose if there are drops of water or lime spots on the dishes after washing.


Reduce the dose if there are whitish streaks on the dishes or a bluish film on glassware or knife blades.

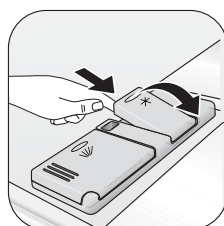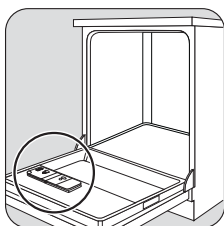

Open the lid.

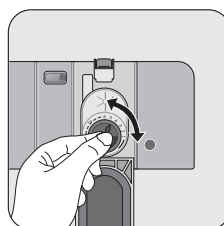

Set the dosage level.  
(The dose is factory set in position 4).

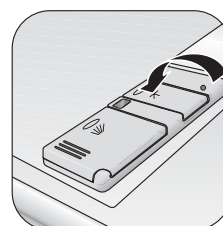

Close the lid and press until it locks.


## Loading cutlery and dishes

- The following items are not suitable for use in the dishwasher:
  - Cutlery with wooden, horn, china or mother-of-pearl handles
  - Plastic items that are not heat resistant
  - Older cutlery with glued parts that are not temperature resistant
  - Bonded cutlery items or dishes
  - Pewter or copper items
  - Lead crystal glass
  - Steel items prone to rusting
  - Wooden platters
  - Items made from synthetic fibres
- When loading the dishwasher, make sure that you:
  - Remove all left over food and debris.
  - Soften remnants of burnt food in pans
  - Load hollow items such as cups, glasses, pans, etc. with the opening downwards so that water cannot collect in the container or a deep base.
  - Dishes and items of cutlery must not lie inside one another, or cover each other.
  - To avoid damage to glasses, they must not touch.
  - Lay small objects in the cutlery basket.
- **Plastic items and pans with non stick coating have a tendency to retain water drops; these items will not dry as well as porcelain and steel items.**


### **IMPORTANT!**

Before closing the door, ensure that the spray arms can rotate freely.




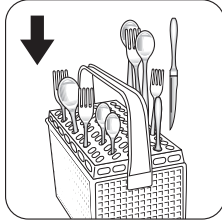



**Load cutlery.**  
For best results we recommend you to use the cutlery grid provided (if the size and dimensions of the cutlery allow it).

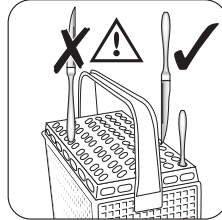


Place knives and other items of cutlery with sharp points or edges with their handles facing upwards.  
**Risk of injury!**

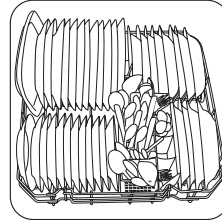

**Load the lower basket.**  
Arrange serving dishes and large lids around the edge of the basket.

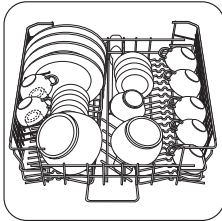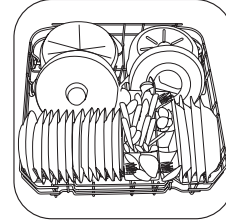

**Load upper basket.**  
Light items (plastic bowls etc.) must be loaded in the upper basket and arranged so they do not move.

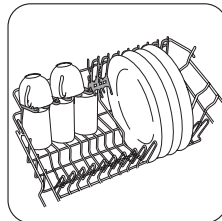

For taller items, the cup racks can be folded upwards.




**If plates are to be loaded in the upper basket:**  
load them starting from the rear positions; tilting them slightly forwards and avoiding the front positions near the door.


## Adjusting the height of the upper basket

If washing very large plates you can load them in the lower basket after moving the upper basket to the higher position.

Maximum height of the dishes in:		
	upper basket	lower basket
With upper basket raised	20 cm	31 cm
With upper basket lowered	24 cm	27 cm

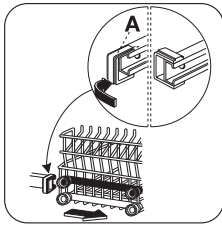

Move the front runner stops (A) of the upper basket outwards and slide the basket out.

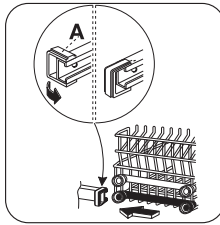

Refit the basket in the higher position and replace the stops (A) in their original position.

### **IMPORTANT!**


Only adjust the height when the upper basket is empty.  
When the basket is in the higher position you will not be able to use the cup racks.




## Filling with detergent

### IMPORTANT!


Only use detergents suitable for dishwashers.  
Observe the manufacturer's dosing and storage recommendations.

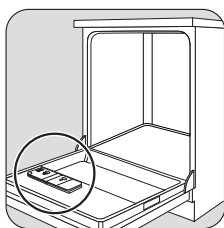


Open the lid.

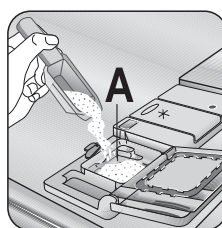


Fill in the detergent in compartment A.

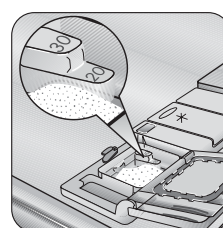

Observe the dosing levels.

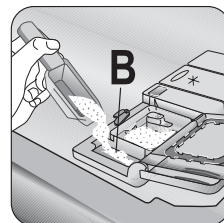

For programmes with  
prewash add an  
additional detergent  
dose in compartment B.

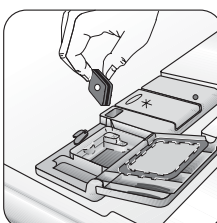

When using detergent  
tablets:  
place detergent tablets  
in compartment A.



Close the lid.

## Unloading the dishwasher

### IMPORTANT!

Open the dishwasher door, leave it ajar and wait a few minutes before removing the dishes: hot dishes are sensitive to knocks. In this way they will be cooler and the drying will be improved.


- Empty the lower basket first and then the upper one; this will avoid water dripping from the upper basket onto the dishes in the lower one.
- Water may appear on the sides and the door of the dishwasher as the stainless steel will eventually become cooler than the dishes.

## Cleaning and Care


### Cleaning the filters

#### **IMPORTANT!**


NEVER use the dishwasher without filters as this may result in damage to the appliance. Incorrect repositioning and fitting of the filters will produce poor washing results.

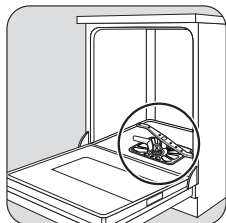


The dishwasher must be switched off

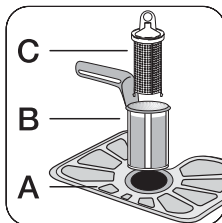


Clean filters **A**, **B** and **C** thoroughly under running water.

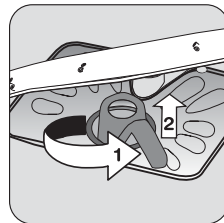


Turn the handle about  $\frac{1}{4}$  turn anticlockwise and remove filters **B** and **C**.

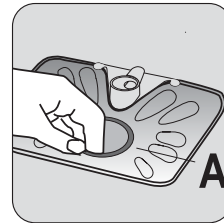

Remove filter **A** from the base of the washing compartment.

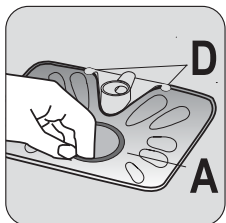

Put the flat filter **A** back in the base of the washing compartment and ensure that it fits perfectly under the two guides **D**.

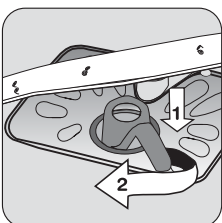

Replace the filters and lock by turning the handle clockwise to the stop.

#### **IMPORTANT!**

**NEVER try to remove the spray arms.**

If residues of soil have clogged the holes in the upper spray arm, remove them with a toothpick.



### External cleaning

Clean the external surfaces of the machine and control panel with a damp soft cloth. If necessary use only neutral detergents. Never use abrasive products, scouring pads or solvent (acetone, trichloroethylene etc....). Ensure that the seals around the door, the detergent and rinse aid dispensers are cleaned regularly with a damp cloth. We recommend every 3 months to run the Pots wash program using detergent but without dishes.

### Prolonged periods of non-operation

If you are not using the machine for any prolonged period of time you are advised to:

1. Unplug the appliance and then turn off the water.
2. Leave the door ajar to prevent the formation of any unpleasant smells.
3. Leave the inside of the machine clean.

### Frost precautions

Avoid placing the machine in a location where the temperature is below 0°C. If this is unavoidable, empty the machine, close the appliance door, disconnect the water inlet pipe and empty it.

### Moving the machine

If you have to move the machine (moving house etc...):

1. Unplug it.
2. Turn the water tap off.
3. Remove the water inlet and discharge hoses.
4. Pull the machine out together with the hoses.
5. Only transport the dishwasher in an upright position, otherwise water may run out.

## Environmental concerns

### Packaging material

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.

### **WARNING!**

When a unit is no longer being used:

- Pull the plug out of the socket.
- Cut off the cable and plug and dispose of them.
- Dispose of the door catch.

This prevents children from trapping themselves inside and endangering their lives.

### Old appliance

This appliance should be handed over to the applicable collection point for recycling. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

## Something not working

### IMPORTANT!

The dishwasher will not start or stops during operation.

Certain problems are due to the lack of simple maintenance or oversights, which can be solved with the help of the indications described in the chart, without calling out a service technician.

Switch off the dishwasher, open the door and carry out the following suggested corrective actions.

Fault code / malfunction	Possible cause	Solution
The dishwasher does not fill with water. - <b>continuous flashing of the start/cancel indicator light</b> - <b>repeating single flash of the "Finished" indicator light</b>	The water tap is blocked or furred with limescale. The water tap is turned off. The filter (where present) in the threaded hose fitting at the water inlet valve is blocked. The water inlet hose has not been correctly laid or it is bent or squashed.	Clean the water tap. Turn the water tap on. Clean the filter in the threaded hose fitting. Check the water inlet hose connection.
The dishwasher will not drain. - <b>continuous flashing of the start/cancel indicator light</b> - <b>repeating double flash of the "Finished" indicator light</b>	The sink spigot is blocked. The water drain hose has not been correctly laid or it is bent or squashed.	Clean out the sink spigot. Check the water drain hose connection.
The programme does not start.	The dishwasher door has not been properly closed. The main plug is not plugged in. The fuse has blown in the household fuse box. Delay start has been selected.	Close the door Insert the mains plug Replace the fuse. If dishes are to be washed immediately, cancel the delay start.

Once these checks have been carried out; close the door, switch on the dishwasher and press the **start/cancel** button. The program will continue from the point at which it was interrupted. If the malfunction or fault code reappears contact your Customer Care Centre.


For other combinations of fault codes not described in the above chart, please contact your Customer Care Centre.



### The wash results are not satisfactory

The dishes are not clean	<ul style="list-style-type: none"> <li>• The wrong washing program has been selected.</li> <li>• The dishes were arranged in such a way as to stop water reaching all parts of the surface. The baskets must not be overloaded.</li> <li>• The spray arms do not rotate freely due to wrong arrangement of the load.</li> <li>• The filters in the base of the washing compartment are dirty or incorrectly positioned.</li> <li>• Too little or no detergent has been used.</li> <li>• The drain hose connection is not correct.</li> </ul>
The dishes are wet and dull	<ul style="list-style-type: none"> <li>• Rinse aid was not used.</li> <li>• The rinse aid dispenser is empty.</li> </ul>
There are streaks, milky spots or a bluish coating on glasses and dishes	<ul style="list-style-type: none"> <li>• Decrease rinse aid dosing.</li> </ul>
Water drops have dried onto glasses and dishes	<ul style="list-style-type: none"> <li>• Increase rinse aid dosing.</li> <li>• The detergent may be the cause, Contact the detergent manufacturer's consumer care line.</li> </ul>

If after all these checks, the problem persists, contact your local Customer Care Centre, quoting the model (Mod.), product number (PNC) and serial number (S.N.). This information can be found on the rating plate located on the side of the dishwasher door (see picture).

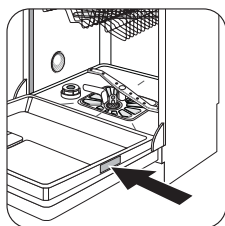

So that you always have these numbers at hand, we recommend you note them here:

Mod. : .....

PNC : .....

S.N. : .....

## Technical data

Dimensions	Width	60 cm
	Height	85 cm
	Depth (including control panel)	61 cm
Electrical connection	Information on the electrical connection is given on the rating plate on the inner edge of the dishwasher's door.	
Voltage - Overall power - Fuse		
Water supply pressure		
	Minimum	50 kPa (7 psir)
	Maximum cold water	800 kPa (116 psi)
	Maximum hot water	350 kPa (51 psi)
Capacity		12 place settings
Max. weight		41 Kg
Noise level		53 dB (A)

## Consumption values

The consumption values are intended as a guide and depend on the pressure and temperature of the water and also by the variations of the power supply and the amount of dishes.

Programme	Programme duration (minutes)	Energy (kWh)	Water (litres)
<b>Pots</b>	115 - 130	1,8 - 2,0	22 - 24
<b>Regular Plus</b>	110 - 115	1,5 - 1,7	23 - 25
<b>Quick 30</b>	30	0,9	9
<b>Regular Eco (1)</b> (Test programme for AS/NZS 2007)	90 - 100	0,83 - 0,91	16 - 18
<b>Rinse &amp; Hold</b>	12	< 0,1	5

(1) The Regular Eco program saves energy and water. It runs at a lower temperature so it is not suitable for heavy soiled wash loads. To save energy, dry performance is reduced so you may have to open the door at the end of the wash cycle or even towel dry some dishes.







## Hints for test institutes

Testing in accordance with **AS/NZS 2007** must be carried out with the appliance fully loaded and using the test programme (see "Consumption values"). The rinse aid dispenser must be filled and the door must be opened at the end of cycle for 30 minutes for drying assessment.


	Full load: 12 standard place settings
Amount of detergent required:	5 g + 25 g (AS/NZS)
Rinse aid setting:	position 4 (AS/NZS)

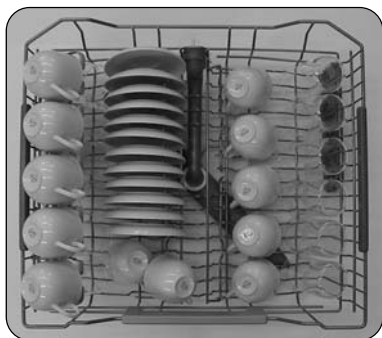


Upper basket

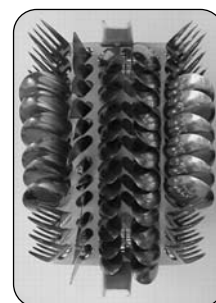

Cutlery basket

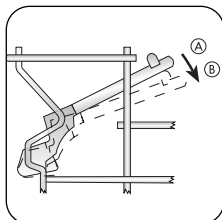

Cup racks:  
position A

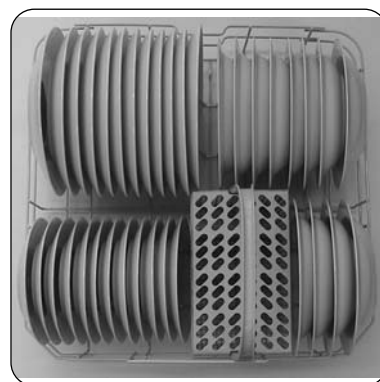

Lower basket

## Installation

### **! WARNING!**

Any electrical and/or plumbing work required to install this appliance should be carried out by a qualified electrician and/or plumber or competent person.

### Water connection

#### **! WARNING!**





This dishwasher may be fed with either hot (max. 60°) or cold water. Nevertheless we recommend connection to a cold water supply. When the dishwasher is likely to be connected to a solar hot water system, drip heater, or any other supply where temperatures in excess of 60° are anticipated, a water temperature tempering valve should be installed. A pressure reducing valve must be fitted if the hot water supply pressure can exceed 350 kPa or the cold supply pressure can exceed 800 kPa.

#### **! WARNING!**

Always use a new hose-set when connecting the appliance to the water mains. An old hose-set must not be reused. The inlet hose should be inspected every 12 months for deterioration and replaced if necessary.

#### **! CAUTION!**

If the machine is connected to new pipes or pipes which have not been used for a long time, you should run the water for a few minutes before connecting the inlet hose.

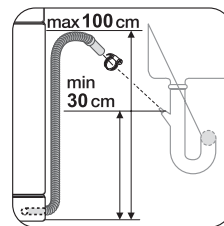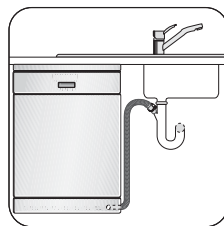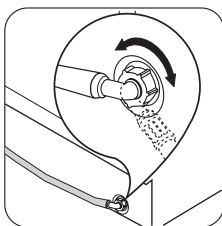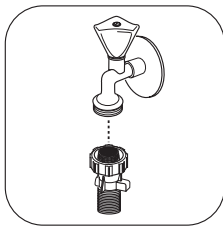

### Inlet hose


Connect the inlet hose to a water tap with an external thread of 3/4" BSP.

The inlet hose can be turned either to the left or the right to suit the installation by means of the locknut.


The locknut must be correctly fitted to avoid water leaks.

### Drain hose

- Connect drain hose to the sink. Secure it with the supplied hose clamp.
- Required height: 30 to 100 cm above bottom of the dishwasher.
- If you use a drain hose extension the total length should not be longer than 4 metres. Likewise the internal diameter of the couplings used for connections to the waste outlet must be no smaller than the diameter of the hose provided.

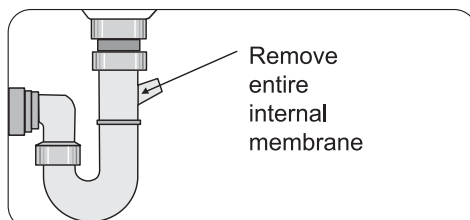

**Remove internal membrane from drain spigot.** When connecting the drain hose to an under sink trap spigot, **the entire plastic membrane must be removed.** Failure to remove all the membrane will result in food particles building up over time eventually blocking the dishwasher drain hose spigot.

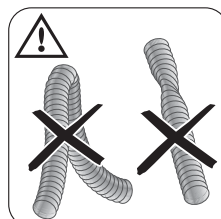

Ensure that the hoses are not kinked, crushed or entangled.

## Electrical connection

### **WARNING!**

- Safety standards require the appliance to be earthed.
- Prior to using the appliance for the first time, ensure that the rated voltage and type of supply on the rating plate match that of the supply where the appliance is to be installed. The fuse rating is also to be found on the rating plate.
- Always plug the mains plug into a correctly installed approved socket.
- Multi-way plugs, connectors and extension cables must not be used. This could constitute a fire hazard through overheating.
- If necessary, have the domestic wiring system socket replaced. If the electrical supply cord has to be replaced, contact your local Customer Care centre.
- The plug must be accessible after the appliance has been installed.
- Never unplug the appliance by pulling on the cable. Always pull the plug.

The manufacturer accepts no liability for failure to observe the above safety precautions.



### **WARNING!**

Ensure that the dishwasher has been tested using the rinse & hold or quick 30 cycle and that the dishwasher fills with water, washes and drains with no leaks.


## Fitting under a counter

By removing the dishwasher's worktop, you can install it under a close fitting sink unit or a pre-existing top.


Be sure that once the appliance has been installed, it is easily accessible for the service engineer in the event that a repair is required.

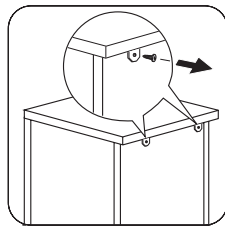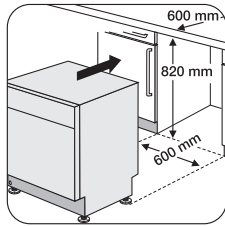

Unscrew the two screws at the rear.

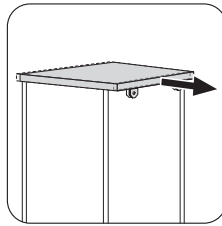

Push the top backwards about 1 cm.

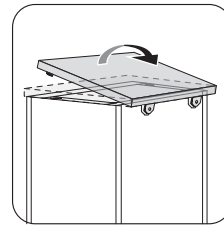


Lift top at the front and remove it.

## Levelling

Good levelling is essential for correct closure and sealing of the door. When the appliance is correctly levelled, the door will not catch on either side of the cabinet.



Check if the dishwasher is levelled.

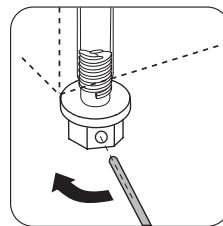

If not, loosen or tighten the adjustable feet until the appliance is perfectly levelled.



## Electrolux Warranty

FOR SALES IN AUSTRALIA AND NEW ZEALAND  
APPLIANCE: Dishwasher

**This document sets out the terms and conditions of product warranties for Electrolux branded appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Electrolux appliance.**

### General Terms and Conditions

1. In this warranty
  - (a) "Electrolux" means Electrolux Home Products Pty Ltd ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited in respect of Appliances purchased in New Zealand;
  - (b) "Appliance" means any Electrolux product purchased by you accompanied by this document;
  - (c) "Warranty Period" means
    - (i) where you use the Appliance for personal, domestic or household purposes in Australia the period of 24 months and in New Zealand the period of 24 months;
    - (ii) where you use the Appliance for commercial purposes, in Australia the period of 0 months and in New Zealand the period of 0 months, (if the period stated is 0 months you are not covered by this product warranty) following the date of original purchase of the Appliance;
  - (d) "you" means the purchaser of the Appliance not having purchased the appliance for re-sale, and "your" has a corresponding meaning.
2. This warranty only applies to Appliances purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand.
3. Electrolux warrants that, when dispatched from an Electrolux warehouse, the Appliance is free from defects in materials and workmanship for the Warranty Period.
4. During the Warranty Period Electrolux or its Authorised Service Centre will, at no extra charge if your appliance is readily accessible without special equipment, and subject to these terms and conditions, repair or replace any parts which it considers to be defective. You agree that any replaced Appliances or parts become the property of Electrolux. This warranty does not apply to light globes, batteries, filters or similar perishable parts.
5. Parts and Appliances not supplied by Electrolux are not covered by this warranty.
6. Where you are within an Electrolux service area, this warranty covers the cost of transport of the Appliance to and from Authorised Service Centres of Electrolux and travelling costs for representatives of the Authorised Service Centre to and from your home or business. If you are outside an Electrolux service area, you will bear these costs. For information about whether you are within an Electrolux service area, please phone 13 13 49 in Australia, or 0800 10 66 10 in New Zealand.
7. Proof of purchase is required before you can make a claim under this warranty.
8. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship.  
Electrolux is not liable in the following situations (which are not exhaustive):
  - (a) The Appliance is damaged by:
    - (i) accident
    - (ii) misuse or abuse, including failure to properly maintain or service
    - (iii) normal wear and tear
    - (iv) power surges, electrical storm damage or incorrect power supply
    - (v) incomplete or improper installation
    - (vi) incorrect, improper or inappropriate operation
    - (vii) insect or vermin infestation.
  - (b) The Appliance is modified without authority from Electrolux in writing.
  - (c) The Appliance's serial number or warranty seal has been removed or defaced.
  - (d) The Appliance was serviced or repaired by anyone other than Electrolux or its Authorised Service Centres.
9. This warranty, the contract to which it relates and the relationship between you and Electrolux are governed by the law applicable in the Australian State where the Appliance was purchased or the law applicable in New Zealand if the Appliance was purchased in New Zealand. Where the Appliance was purchased in New Zealand for business purposes the Consumer Guarantee Act does not apply.

### Limitation of Liability

**10. To the extent permitted by law:**

- (a) Electrolux excludes all warranties other than as contained in this document;
- (b) Electrolux shall not be liable for any loss or damage whether direct or indirect or consequential arising from your purchase, use or non-use of the Appliance.

**11. Provisions of the Trade Practices Act and State consumer legislation in Australia, and the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act in New Zealand, imply warranties or conditions, or impose obligations, upon Electrolux which cannot be excluded, restricted or modified. To the extent permitted by law, the liability of Electrolux (if any) arising out of or in relation to the Appliance or any services supplied by Electrolux shall be limited (where it is fair and reasonable to do so):**

- (a) in the case of Appliances, at its option, to the replacement or repair of the Appliances or the supply of equivalent products or the payment of the cost of replacing the Appliances or having the Appliances repaired or of acquiring equivalent Appliances. Upon being replaced, parts and Appliances become the property of Electrolux; or

- (b) in the case of services, at its option, to the supply of the services again or the payment of the cost of having the services re-supplied;

and in the case of Appliances or services supplied in New Zealand, loss or damage whether direct or indirect or consequential that is reasonably foreseeable.

### Privacy

You acknowledge that in the event that you make a warranty claim it will be necessary for Electrolux and its Authorised Service Centres to exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

### Important Notice

Before Calling a Service Technician please check carefully the operating instructions, service booklet and the warranty terms and conditions.

<p><b>FOR SERVICE</b> OR TO FIND THE ADDRESS OF YOUR NEAREST STATE SERVICE CENTRE IN AUSTRALIA <b>Please call 13 13 49</b> For the cost of a local call (Australia only)</p>	<p><b>SERVICE AUSTRALIA</b></p> <div> <b>Electrolux</b></div> <p>ELECTROLUX HOME PRODUCTS</p>	<p><b>FOR SPARE PARTS</b> OR TO FIND THE ADDRESS OF YOUR NEAREST STATE SPARE PARTS CENTRE IN AUSTRALIA <b>Please call 13 13 50</b> For the cost of a local call (Australia only)</p>
<p><b>FOR SERVICE</b> OR TO FIND THE ADDRESS OF YOUR NEAREST STATE SERVICE CENTRE IN NEW ZEALAND <b>Free call 0800 10 66 10</b> (New Zealand only)</p>	<p><b>NEW ZEALAND SPARE PARTS CENTRE</b></p> <p><b>AUCKLAND</b> Prime Distributors Ltd. 8 Highbrook Drive, East Tamaki. . . . (09) 273 3580 <b>CHRISTCHURCH</b> Prime Distributors Ltd. Unit 1, 127 Montreal Street . . . . (03) 377 1009 R. Redpath Ltd. 55 Ferry Road. . . . . (03) 379 0446 <b>DUNEDIN</b> Appliance Parts Company, 590 Hillside Road . . . . . (03) 455 5443</p> <div> <b>Electrolux</b></div> <p>ELECTROLUX HOME PRODUCTS</p>	





[www.electrolux.com](http://www.electrolux.com)

[www.simpson.com.au](http://www.simpson.com.au)

